




INSTRUCTIONS FOR: B12, B15, B18, B21, B24 WALL SINGLE DOOR CABINET

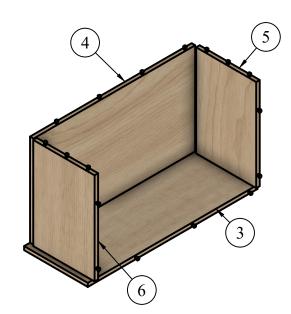

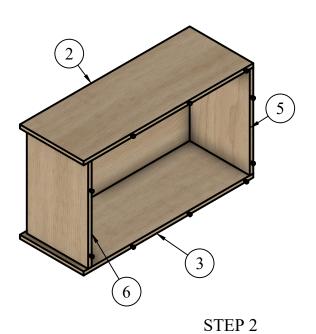

STEP 1

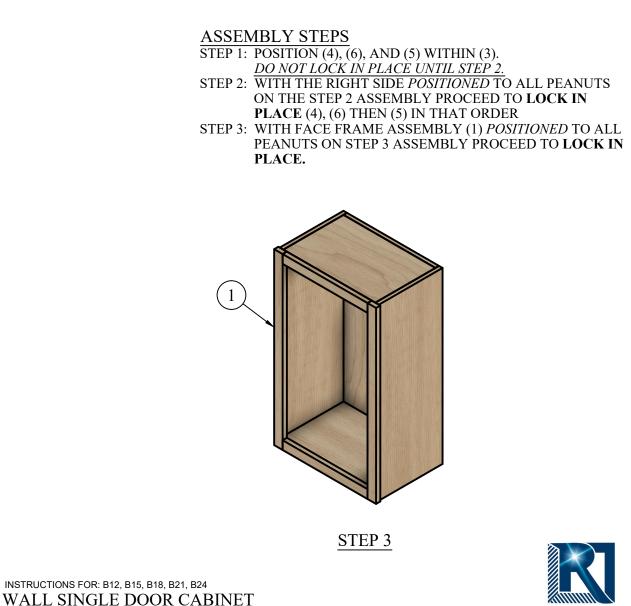

REV 1

RIGEL CABINETRY

FINAL STEPS. STEP 1: USING PROVIDED HINGES INSTALL CABINET DOOR (7) TO FACE FRAME (1).



INSTRUCTIONS FOR: B12, B15, B18, B21, B24 WALL SINGLE DOOR CABINET

RIGEL CABINETRY



Need help with your cabinet assembly? Scan this QR code to access our customer service page. We're here to provide top-notch support and find the best solution for your needs. Whether you have questions, encounter issues, or have feedback on our documentation, we're dedicated to listening and helping. Let us assist you in making the most of your Rigel Cabinetry experience!



04/13/2023