PARTS LIST

| ITEM	QTY	PART NUMBER
1	1	FRONT FACE
2	1	LEFT FINISHED SIDE
3	1	TOE
4	1	UNFINISHED BACK
5	1	LEFT FINISHED SIDE(MIRROR)
6	1	WEB FRAME 1
7	1	WEB FRAME 1(MIRROR)
8	1	DECK
9	1	PANEL INSERT
10	1	DOOR BUILDER V17
11	1	RUBBER MALLET
12	1	SIDE PROTECTION DEVICE

TOOLS REQUIRED

EDGE PROTECTOR
(PROVIDED)
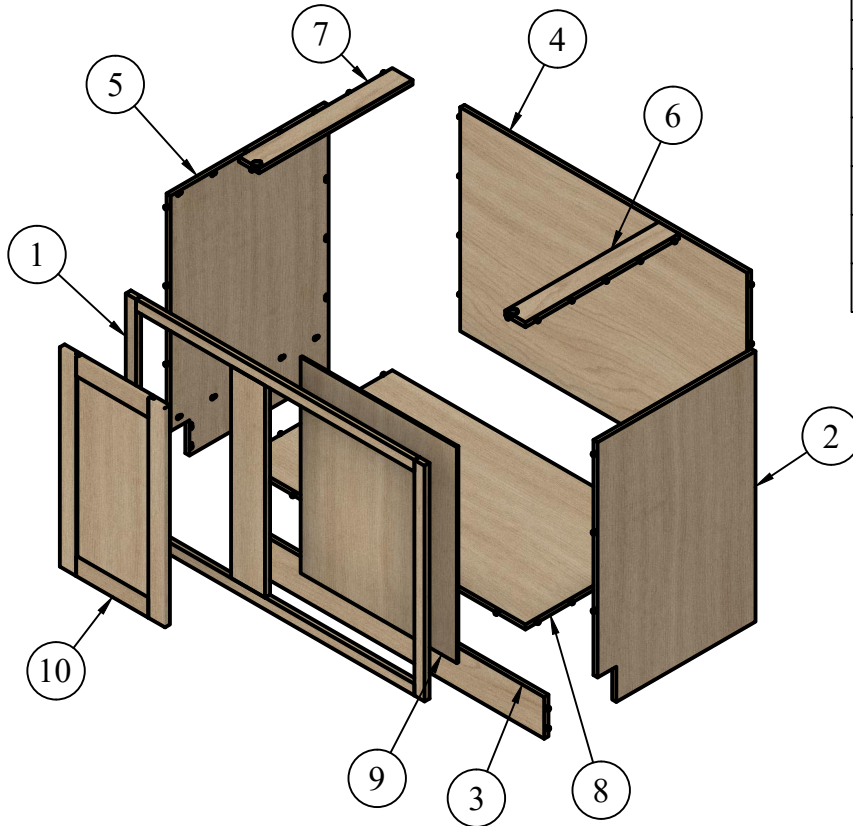
RUBBER MALLET
(NOT PROVIDED)
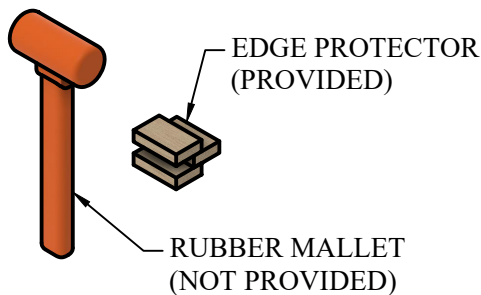
To protect the edges of your plywood components during assembly, we've included a EDGE PROTECTOR in your package. This guard is designed to be placed on the side of components that will be moved into the Peanut Slots and locked into place using a rubber mallet.
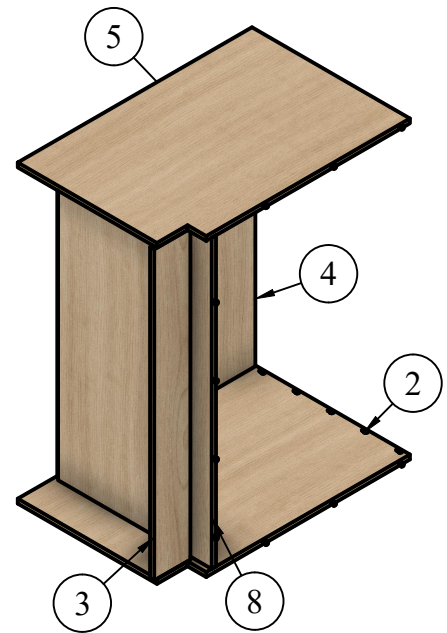
Want more?
Assembly Video
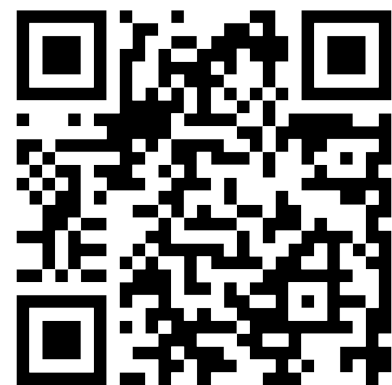
Don't struggle with assembly - scan this QR code to access our helpful animation guide on youtube.

INSTRUCTIONS FOR: B12, B15, B18, B21, B24
BLIND BASE STANDARD CABINET

03/24/2023

REV 1
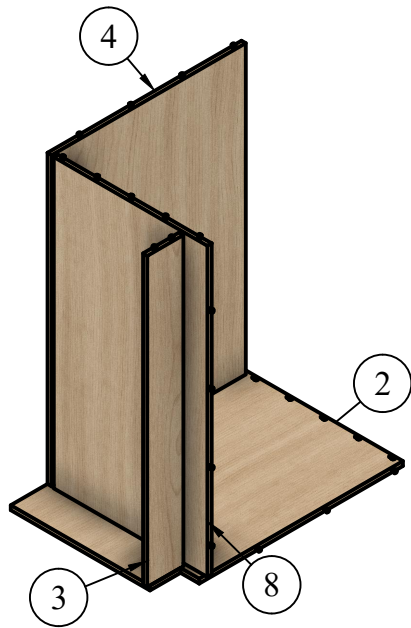
STEP 1

STEP 2

ASSEMBLY STEPS
STEP 1: POSITION (4), (8), AND (3) WITHIN (2).
*DO NOT LOCK IN PLACE UNTIL STEP 2.*
STEP 2: WITH THE RIGHT SIDE *POSITIONED* TO ALL PEANUTS
ON THE STEP 2 ASSEMBLY PROCEED TO **LOCK IN
PLACE** (4), (8) THEN (3) IN THAT ORDER
STEP 3: *POSITION* (7) WITHIN (5) AND **LOCK IN PLACE**
POSITION (6) WITHIN (2) AND **LOCK IN PLACE**
STEP 4: WITH FACE FRAME ASSEMBLY (1) *POSITIONED* TO ALL
PEANUTS ON STEP 3 ASSEMBLY PROCEED TO **LOCK IN
PLACE.**

STEP 3
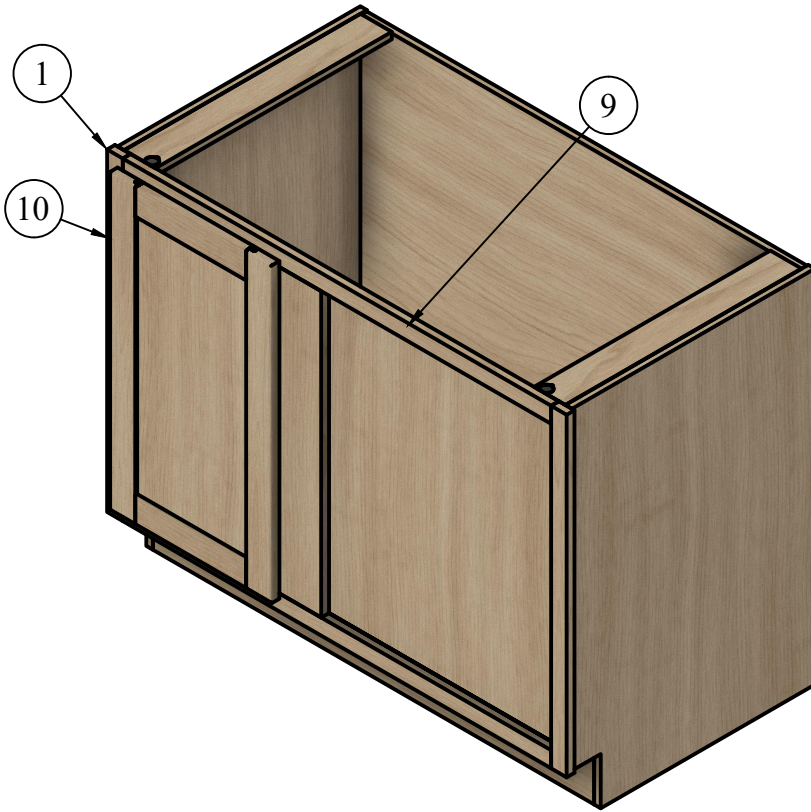
STEP 4

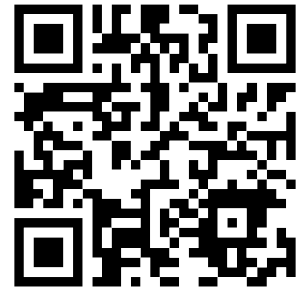BLIND BASE STANDARD CABINET

03/24/2023

REV 1
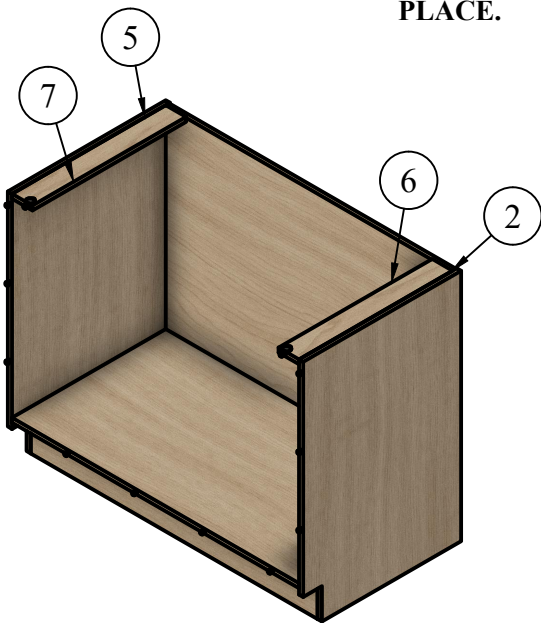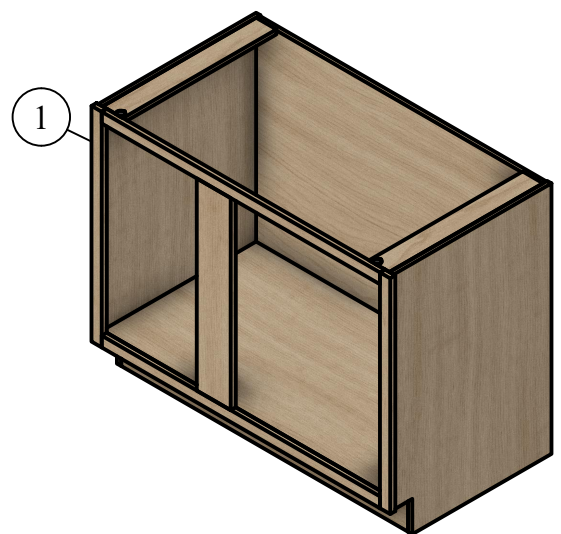
FINAL STEPS

STEP 1: SLIDE PANEL INSERT (9) ON THE BACK SIDE OF
THE FACE FRAME (1)

STEP 2: USING PROVIDED HINGES INSTALL CABINET
DOOR (10) TO FACE FRAME (1).

INSTRUCTIONS FOR: B12, B15, B18, B21, B24

BLIND BASE STANDARD CABINET

03/24/2023

REV 1

RIGEL CABINETRY